


# DD9663-M UK    DD9693-M UK

## Cooker Hood

### Operating and Installation Instructions

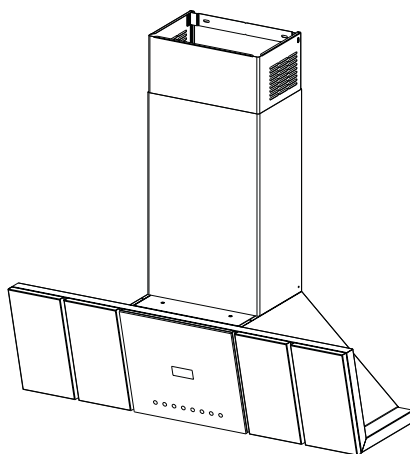

PERFEKT IN FORM UND FUNKTION

**AEG**

 **Electrolux**

Thank you for buying an AEG product.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on AEG Products, please contact our Customer Services Department. For general enquiries concerning your AEG appliance or for further information, visit our website at <http://www.aeg.co.uk>

Customer Services Department  
Major Appliances  
AEG  
Addington Way  
Luton  
Bedfordshire  
LU4 9QQ

Tel: 08705 350 350(\*)

\* calls to this number may be recorded for training purposes.

## For the User

### Important Safety Information

### Your Appliance

### Operating Instructions

Cooker Hood Controls

To Operate

Recirculation

Extraction

### Maintenance and Cleaning

External Cleaning

Metal Grease Filter

To Remove the Grease Filter Cassette

Charcoal Filter

To Remove/Replace the Charcoal Filter

Worktop Lighting

Replacing the Light Bulb

### Something Not Working

### Service and Spare Parts

### Guarantee Conditions

## For the Installer

### Installation Instructions

Technical Information

### Electrical Connections

Electrical Requirements

Electrical Connection

### Installing the Cooker Hood

Installation Requirements

Unpacking

Clearance Height

Wall drilling and bracket fitting

Hood body mounting

Drilling the Shelves

Chimney assembly

Top Shelf

### Electrical Connection and Working Test

## Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instruction book



Safety instructions



Step by step instructions

## IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Services Department.

### ■ Installation

- Any installation work must be undertaken by a qualified electrician or competent person.
- This hood must be installed in accordance with the installation instructions and all measurements adhered to.
- If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Code of Practice BS.6172, BS.5440 and BS.6891 (natural gas) and BS.5482 (LP gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Dept. of the Environment, the Building Standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department.
- The fan motor of the cooker hood incorporates a cut-out device, which will operate if the cooker hood is installed below the minimum height recommended in the Technical Information section, or if the motor becomes overheated. If the cut-out device is activated, switch off the motor and allow the hood to cool. The cut-out device will reset itself when the fan motor has cooled.
- It is dangerous to alter the specifications or modify this product in any way.
- When installed between adjoining wall cabinets, the cabinets must not overhang the hob.
- If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type.
- If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.
- When the hood is used in conjunction with appliances supplied with energy other than electricity, the negative pressure in the room must not exceed 0.04mbar to prevent fumes being drawn back into the room by the hood.
- The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose.
- Do not install above a cooker with a high level grill.

### ■ Child Safety

- The appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.


### ■ During Use

- This appliance is for domestic use only.
- Never leave frying pans unattended during use as over-heated fats and oils might catch fire.
- Never do flambé cooking under this cooker hood.
- Do not leave naked flames under this hood.

### ■ Maintenance and Service


- This appliance can be a fire hazard if the grease and charcoal filters are not cleaned or replaced as recommended.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Refer to your local Service Force Centre. Always insist on genuine spare parts.

# YOUR APPLIANCE

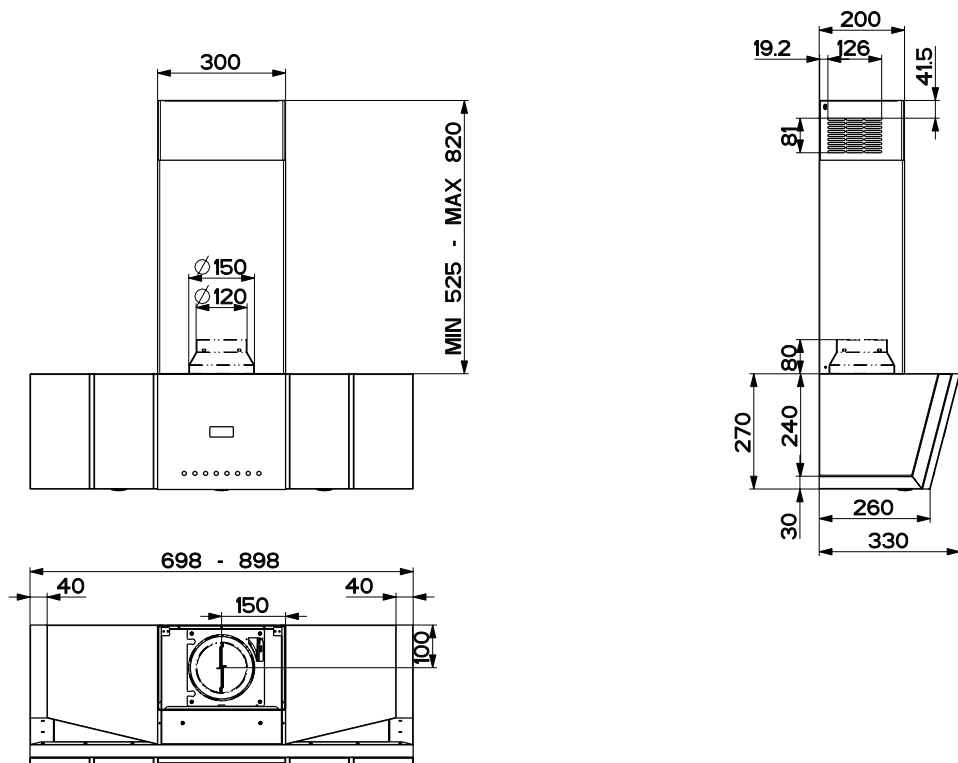

## OPERATING INSTRUCTIONS

This cooker hood is designed to extract unpleasant odours from the kitchen, **it will not extract steam.**

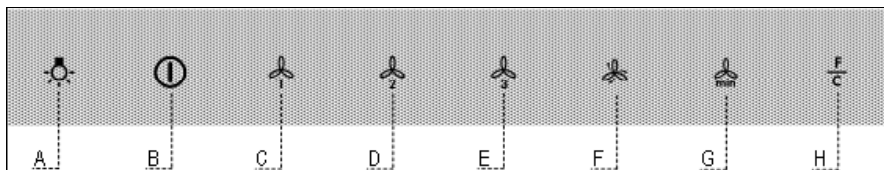

Key	Function	Display
<b>A</b>	Turns the Lighting System on and off.	On or Off
<b>B</b>	Turns the Motor on and off.	On or Off
<b>C</b>	Activates speed one.	On.
<b>D</b>	Activates speed two.	On.
<b>E</b>	Activates speed three.	On.
<b>F</b>	Activates intensive speed from any other speed, including motor off. This speed is timed to run for 5 minutes, after which the system will return to the speed that was previously set. Suitable to deal with severe cooking fumes. It is deactivated by pressing the button or turning the motor off.	On.
<b>G</b>	<p>Activates delayed automatic shutdown of the motor and the lighting system after 10' if speed three is set, after 15' if speed two is set, and after 30' if speed one is set. Suitable to complete the elimination of residual odours, it is deactivated by pressing the button of turning the motor off.</p> <p>Enables Keyboard Lock mode if pressed and held for 5 seconds.</p> <p>It is disabled by pressing the button for 5 seconds.</p>	<p>On.</p> <p>All the Leds flash twice and during Keyboard Lock the Leds light up in sequence.</p> <p>All the Leds flash once.</p>
<b>H</b>	<p>Performs a Reset of the Filter saturation alarm when the button is pressed for approximately 2 seconds with the hood turned off.</p> <p>If pressed and held for 5 seconds with the hood turned off, it: enables the Activated Charcoal Filter Alarm. disables the Activated Charcoal Filter Alarm.</p>	<p>After 100 hours operation the Led lights up continuously to indicate saturation of the Metal Grease Filters. After 200 hours operation the Led flashes to indicate saturation of the Activated Charcoal Filters.</p> <p>2 Flashes 1 Flash</p>

# OPERATING INSTRUCTIONS

This cooker hood can be used to recirculate or extract contaminated air.


## Recirculation Mode

The cooker hood is supplied specified for use in the recirculation mode with the charcoal filter fitted.

The contaminated air is cleaned by passing through the filters and then back into the kitchen.

The activated charcoal filter absorbs odours arising from cooking. In use it will slowly become saturated in grease and less effective. The filter normally requires changing after at least every three months or more frequently if the hood is used for more than three hours per day.

- Insert the connection extension pieces laterally **14.1** in connection **15**.
- Insert the Connector **15** into the Support bracket **7.3** and fix it with a screw.
- Make sure that the outlet of the extension pieces **14.1** is horizontally and vertically aligned with the chimney outlets.
- Connect the air outlet connection **15** to the hood body outlet using either a flexible or rigid pipe  $\varnothing$  150 mm, the choice of which is left to the installer.
- Ensure that the activated charcoal filters have been inserted.

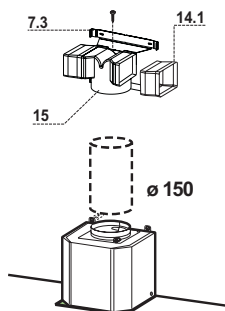

## Extraction (Ducted)

The cooker hood is more effective when installed in the extraction mode (ducted to the outside).

Venting kits may be purchased through your retailer or DIY store, and must be evacuated through an outside vent of  $\varnothing$ 125 (5ins) or  $\varnothing$ 150mm (6ins).

The ducting used must be manufactured from fire retardant material conforming to the relevant British Standard or DIN 4102-B1.

**When the cooker hood is ducted to the outside the charcoal filter must be removed.**


When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe  $\varnothing$  150 or 125mm, the choice of which is left to the installer.

### To install a $\varnothing$ 150

- Fix the pipe in position using sufficient pipe clamps (not supplied).

### To install a $\varnothing$ 120

- To install a  $\varnothing$  120 mm air exhaust connection, insert the reducer flange **9**.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove any activated charcoal filters.

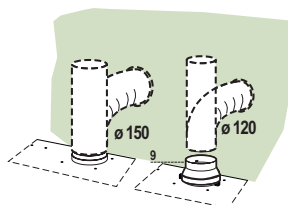

## Fitting the Ducting

- To install the Ducting Version of the hood, the optional Ducting chimney kit must be purchased.



**Never do flambé cooking under this cooker hood.**

*Take extra care when frying and never leave frying pans unattended during use, as overheated fats and oils can catch fire.*

*Do not leave naked flames under the cooker hood.*

*Ensure the hood is switched on before using the hob.*

*Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously.*

*Ensure not to damage the charcoal filter when cleaning or replacing as the activated charcoal inside is saturated with grease, which will stain if it comes into contact with clothing or furnishings.*

## MAINTENANCE AND CLEANING



**Before carrying out any maintenance or leaning isolate the cooker hood from the mains supply.**

**The cooker hood must be kept clean, as a build up of grease or fat can be a fire hazard.**

### External Cleaning

The metal casing, grille and chimney should be cleaned at least once a month to keep it looking like new. Wipe over the hood with a soft cloth wrung out in mild soapy water and then dry thoroughly.

Never use scouring pads or abrasive cleaners as they may scratch or damage the surfaces.



*Always wear protective gloves when cleaning the hood.*

*Never use scouring pads or abrasive cleaners.*

*Never use excessive amounts of water when cleaning particularly around the control panel.*

### Metal Grease Filters

Filters can be washed in the dish machine. They need to be washed when Drop-sign appears on the display or in any case every 2 months, or even more frequently in case of particularly intensive use of the hood.

#### To Remove the Grease Filter


- These filters can be washed in a dishwasher, and need to be cleaned when the Led on Button H lights up in a continuous manner or at least once every approximately two months' use, or more frequently in the case of particularly intensive use.

#### Alarm reset

- Turn the Lights and the Suction motor off.
- Press button **H** and hold for at least 2 seconds, confirmation is provided by the fact that the Led goes out.

#### Cleaning the filters

- Remove the Filters one at a time, supporting them with one hand while you pull the lever down with the other.
- Wash the Filters without bending them, and leave them to dry before replacing them.
- Replace the filters, taking care to ensure that the handle is facing outwards.

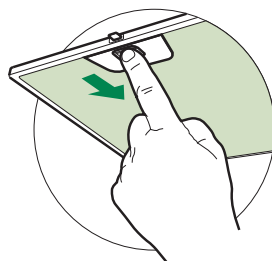

## MAINTENANCE AND CLEANING

### Alarm signal reset

- Turn the Lights and the Suction motor off.
- Press button **H** and hold for at least 2 seconds, confirmation is provided by the fact that the Led goes out.



**Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.**

### Charcoal Filters

In the recirculation mode the charcoal filters absorb smells and unwanted odours.

This filter cannot be washed or regenerated, and must be replaced when the Led on Button **H** starts to flash, or at least every 4 months. The alarm can only be seen when the Suction motor is turned on.


### Enabling/Disabling the alarm signal

- For Recirculation Version Hoods, the Filter saturation alarm must be enabled on installation or at a later date.
- Turn the Lights and the Suction motor off.
- Press button **H** and hold for at least 5 seconds until the Led gives confirmation as follows:
  - Led flashes twice - Activated Charcoal Filter Alarm ENABLED.
  - Led flashes once - Activated Charcoal Filter Alarm DISABLED.



### To Remove the Charcoal Filters

- Open the glass panel on the hood by pulling downwards.
- Remove the saturated activated charcoal filters as shown (A).
- Fit the new filters, as indicated (B).
- Close the glass panel.

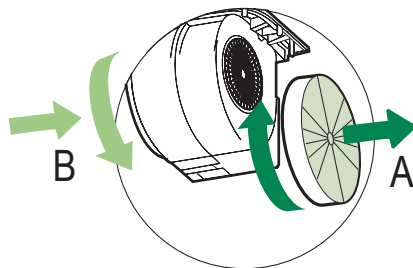


**This appliance can be a possible fire hazard if the grease and charcoal filters are not cleaned and replaced as recommended.**



## MAINTENANCE AND CLEANING

### Changing the Halogen Spot Lamp

- Extract the lamp from the lamp holder by pulling gently.
- Replace with another of the same type, making sure that the two pins are properly inserted in the lamp holder socket holes.

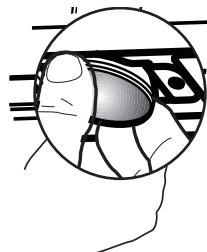

**Replacement filters and light bulbs can be obtained from your local Service Force Centre.**

## SOMETHING NOT WORKING

If, having followed these instructions carefully, your cooker hood fails to work properly please carry out the following checks.

Symptom	Solution
The cooker hood will not start	<ul style="list-style-type: none"> <li>• Check the hood is connected to the electricity supply.</li> <li>• Check that the fan speed control is set to 1, 2 or 3.</li> </ul>
The cooker hood is not working effectively	<ul style="list-style-type: none"> <li>• The fan speed is set high enough for the task.</li> <li>• The grease filter is clean.</li> <li>• The kitchen is adequately vented to allow the entry of fresh air.</li> <li>• If set up for recirculation, check that the charcoal filter is still effective.</li> <li>• If set up for extraction, check that the ducting and outlets are not blocked.</li> </ul>
The cooker hood has switched off during operation	<ul style="list-style-type: none"> <li>• The safety cut-out device has been tripped.</li> <li>• Turn off the hob and then wait for the device to re-set.</li> </ul>

If after all these checks, the problem persists, contact your local Service Force Centre, quoting the model and serial number.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

**In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.**

## SERVICE AND SPARE PARTS

If you require an engineer or wish to purchase spare parts contact your local Service Force Centre by telephoning:

**08705 929929**

Your telephone call will be routed to the Service Force Centre covering your postcode area.

For general enquires concerning your AEG appliance or for further information on AEG products, please contact our Customer Services Department at the address below or visit our website at [www.aeg.co.uk](http://www.aeg.co.uk)

Customer Services Department  
Major Appliances  
AEG  
Addington Way  
Luton  
Bedfordshire  
LU4 9QQ  
Tel: 08705 350 350 \*

\* calls to this number may be recorded for training purposes

# GUARANTEE CONDITIONS

## Standard Guarantee Conditions

We, AEG, undertake that if within 12 months of the date of the purchase this AEG built-in appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials and carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by an AEG Service Force Centre.
- Any appliances or defective parts replaced shall become the property of this company.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

## EXCLUSIONS

### This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of AEG manufacture which were not marketed by AEG. This guarantee is in addition to your statutory and legal rights.

## EUROPEAN GUARANTEE

If you move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

**Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will ensure that the local Service organisation is aware of your move and able to look after you and your appliance.**

France	Senlis	+33 (0)3 44 62 29 99
Germany	Nurnberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)01678 47053
Sweden	Stockholm	+46 (0)8 738 79 50
UK	Luton	+44 (0)8705 350 350

# INSTALLATION INSTRUCTIONS



*It is dangerous to alter the specifications or attempt to modify this product in any way.*

## Technical Information

### DIMENSIONS

HEIGHT (CANOPY):	270 mm
HEIGHT (CHIMNEY):	500-330 mm
WIDTH (CANOPY):	698 - 898 mm
WIDTH (CHIMNEY):	300 mm
GROSS:	26 kg - 28 kg
NET:	17 kg - 20 kg

### ELECTRICAL SUPPLY:

220-240 V (50 Hz)

### POWER CONSUMPTION:

370 - 390 W

### FAN MOTOR:

330 W

### LAMP:

(2x20W) HALOGEN LAMP

40 W

(3x20W) HALOGEN LAMP

60 W

### SUITABLE FOR INSTALLATION

#### ABOVE:

ELECTRIC HOB:

7 KW

GAS HOB:

10 KW

SLOT-IN GAS COOKER

13.5 KW

SLOT-IN ELECTRIC COOKER

12.4 KW



**Note: CE Marking certifies that this appliance complies with the requirements laid down in EEC directive 89:336. (Electromagnetic compatibility) and subsequent modifications and Low Voltage directive 72/23/E.**

# ELECTRICAL CONNECTIONS



*This appliance must be earthed*

## Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local Electricity Board regulations. For your own safety this should be undertaken by a qualified electrician e.g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).

## Electrical Connection

Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.

This appliance is fitted with a 3 core mains cable and must be permanently connected to the electricity supply via a double-pole switch having 3mm minimum contact gap on each pole. A Switched Fuse Connection Unit to BS1363 Part 4, fitted with a 3 Amp fuse, is a recommended mains supply connection accessory to ensure compliance with the Safety Requirements applicable to fixed wiring instructions.

This appliance conforms to BS 800: 1988 and EEC Directive No. 78 308 regarding suppression of radio and television interference.

# INSTALLING THE COOKER HOOD

Please ensure that when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.



*All installations must comply with the local authorities requirements for the discharge of exhaust air.*

*Incorrect installation may affect the safety of this cooker hood.*

## Installation Requirements



*Before installation check the wall to which the cooker hood is to be fitted for electric cables, water pipes or gas.*

*The chimney hood must be installed according to the instructions suppliers below and by qualified and competent personnel to the relevant National Standards.*

The cooker hood is designed to be fixed to a solid block or block wall over a cooking area. If not, suitable fixing must be used for other types of walls. The hood can be used in the extraction (ducted to the outside) or recirculation (internal recycling) mode.

The Installation work must be undertaken by a qualified and competent person. The manufacturer disclaims any responsibility to damages due to incorrect installation of the cooker hood or if the cooker hood is not installed in compliance with relevant regulations controlling this type of installation.

## Unpacking


Before unpacking the cooker hood position the carton with the arrows pointing upwards as illustrated on the carton.

**The canopy is supplied with the following components for installation:**

Ref.	Q.ty	Product Components
1	1	Hood Body, complete with: Controls, Light, Blower, Filters
2	1	Telescopic Chimney comprising:
2.1	1	Upper Section
2.2	1	Lower Section
9	1	Reducer Flange $\varnothing$ 150-120 mm
14.1	2	Air Outlet Connection Extension
15	1	Air Outlet Connection

Ref.	Q.ty	Installation Components
7.2.1	2	Upper Chimney Section Fixing Brackets
7.3	1	Air Outlet Connection Support
12c	6	Screws 2,9 x 9,5

Q.ty	Documentation
1	Instruction Manual

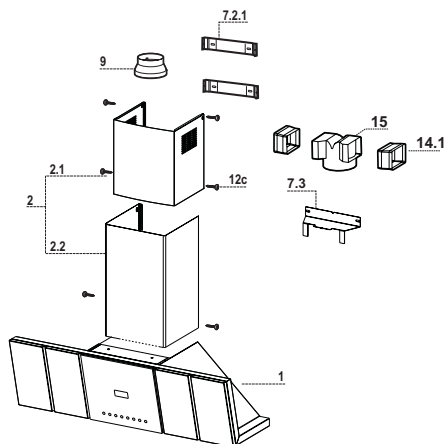


# INSTALLATION INSTRUCTIONS

## Wall drilling and bracket fixing

Wall marking:


- Draw a vertical line on the supporting wall up to the ceiling, or as high as practical, at the centre of the area in which the hood will be installed.
- Draw a horizontal line at 650 mm above the hob.
- Place bracket **7.2.1** on the wall as shown about 1-2 mm from the ceiling or upper limit align-ing the centre (notch) with the vertical reference line.
- Mark the wall at the centres of the holes in the bracket.
- Place bracket **7.2.1** on the wall as shown at X mm below the first bracket (X = height of the upper chimney section supplied), aligning the centre (notch) with the vertical line.
- Mark the wall at the centres of the holes in the bracket.
- Mark a reference point as indicated at 122 mm from the vertical reference line and 280 mm above the horizontal reference line.
- Repeat this operation on the other side.
- Drill  $\varnothing$  8 mm holes at all the centre points marked.
- Fix the lower bracket **7.2.1** using the screws.
- Fix the upper bracket **7.2.1** and the air outlet connection support **7.3** together using 2 screws.
- Insert the two screws in the hood body fixing holes, leaving a gap of 5-6 mm between the wall and the head of the screw.

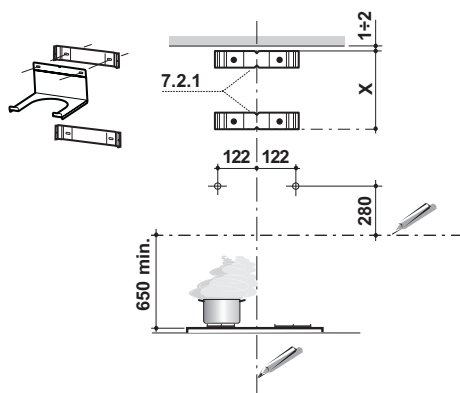

# INSTALLATION INSTRUCTIONS

## Hood body mounting


- Before attaching the hood body, tighten the two screws Vr located on the hood body mounting points.
- Hook the hood body onto the screws.
- Fully tighten support screws.
- Adjust screws Vr to level the hood body.

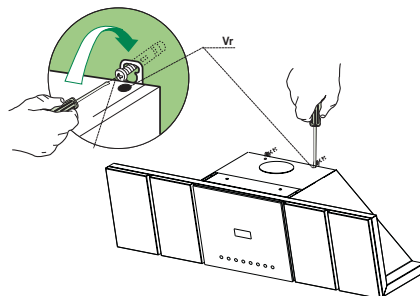

## Chimney assembly


### Upper exhaust flue

- Slightly widen the two sides of the upper flue and hook them behind the brackets **7.2.1**, making sure that they are well seated.
- Secure the sides to the brackets using the 4 screws **12c** (2,9 x 9,5) supplied.
- Make sure that the outlet of the extensions pieces is aligned with the chimney outlets.

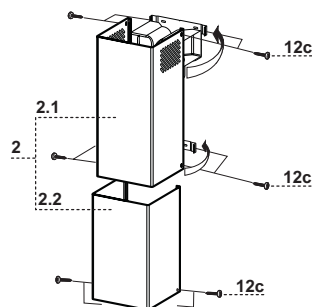


### Lower exhaust flue

- Slightly widen the two sides of the flue and hook them between the upper flue and the wall, making sure that they are well seated.
- Fix the lower part laterally to the hood body using the 2 screws **12c** (2,9 x 9,5) supplied.

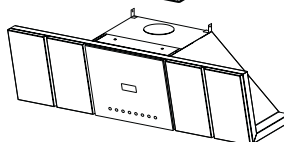

## Electrical connection and working test:


- Connect the hood to the mains supply.
- Open the upper panel by pressing the **A**-key (See Part "USE" ) for at least 2 seconds.
- Remove the metal filters (See Part "MAINTENANCE") and make sure that the connector piece of the supply cable is correctly inside the hood socket.

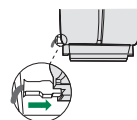



Dir. 89/336/CEE  
73/23/CEE  
93/68/CEE



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.